



Scan the QR code to see the manual.



OWNER'S MANUAL

BUILT-IN WARMING DRAWER



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

ENGLISH

DW7D1913M / DW7D1913B / DW7D1913G



MFL05795702
Rev.00_031826

www.lg.com

Copyright © 2026 LG Electronics. All Rights Reserved

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.

This manual is subject to revision by the manufacturer.

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.....	3
WARNING	3
CAUTION	9
CARING FOR THE ENVIRONMENT	12

INSTALLATION

Product Overview.....	13
Installation Requirements	13
Installing the Appliance.....	13

OPERATION

Control Panel	19
Using the Oven.....	19

TROUBLESHOOTING

Before Calling for Service.....	21
---------------------------------	----

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into '**WARNING**' and '**CAUTION**' as described below.

Safety Messages



This symbol is displayed to indicate matters and operations that can cause risk.

Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the appliance.

WARNING



WARNING

- To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Technical Safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the

appliance. Cleaning and user maintenance shall not be made by children without supervision.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy when using the microwave oven, read all instructions before using the appliance.
- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven. Children less than 8 years of age shall be kept away unless continuously supervised.
- Accessible parts can become hot during use. Young children should be kept away.
- Do not attempt to tamper with, or make any adjustments or repairs to the door, door seals, control panel, safety interlock switches or any other part of the oven which would involve the removal of any cover protecting against exposure to microwave energy.
- Only qualified service person from LG Electronics service centre should disassemble, repair, or modify the appliance.
- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- Unlike other appliances, the microwave oven is a high-voltage and a high electrical-current piece of equipment. Improper use or repair could result in harmful exposure to excessive microwave energy or in electric shock.
- If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- Do not use your microwave oven to cook eggs in the shell. Pressure can build up inside the shell, causing it to burst.
- Liquids and other foods must not be heated in sealed containers since they are liable to explode. Remove the plastic wrapping from

food before cooking or defrosting. Note though that in some cases food should be covered with plastic film, for heating or cooking.

- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which can result in shattering of the glass.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance should not be used for commercial catering purposes. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm house;
 - By clients in hotels, motels and other residential environments;
 - Bed and breakfast type environments.
- Do not install this appliance inside mobile vehicles (camping cars).
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Only use utensils that are suitable for use in microwave ovens. They may heat-up and char.
 - Remove metal twist ties before using the appliance.
 - Do not use wooden containers and ceramic containers that have metallic (e.g. gold or silver) inlays.
 - Metallic containers for food and beverages are not allowed during microwave cooking. Metal objects in particular may arc in the oven, which can cause serious damage.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers,

sponges, damp cloth and similar can lead to risk of injury, ignition or fire.

- If smoke is observed (or emitted), switch off or unplug the appliance and keep the door closed in order to stifle any flame.
- Only use the temperature probe recommended for this oven.
 - You can not ascertain that the temperature is accurate with an unsuitable temperature probe.
 - This model does not provide a temperature probe.
- When heating liquids, e.g. soups, sauces and beverages in your microwave oven,
 - Avoid using straight sided containers with narrow necks.
 - Do not overheat.
 - Stir the liquid before placing the container in the oven and again halfway through the heating time.
 - Be careful when handling the container.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
 - After heating, let it stand in the appliance for a short time; stir or shake it again carefully and check the temperature of it before consuming to avoid burns (especially, contents of feeding bottles and baby food jars).
- The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- The appliance shall not be cleaned with a steam cleaner.
- Steam cleaner is not to be used.
- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Installation

- Ensure that the outlet socket is properly grounded, and that the earth pin on the power cord is not damaged or removed from the power plug. For more details on grounding, inquire at an LG Electronics customer information centre.
- This appliance must be earthed. The wires in the mains lead are coloured in accordance with the following codes:
 - BLUE: Neutral
 - BROWN: Live
 - GREEN and YELLOW: Earth
- As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:
 - The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.
 - The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or Coloured RED.
 - The wire which is coloured GREEN & YELLOW or GREEN must be connected to the terminal which is marked with the letter G or earth symbol.

 Earth symbol

- This appliance incorporates an earth connection for functional purposes.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Improper use may cause serious electric damage.
- The appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set on electrical portable

outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

- If the power cord is damaged or the hole of the outlet socket is loose, do not use the power cord and contact an authorized service centre.
- The appliance must not be installed behind a decorative door in order to avoid overheating.

Operation

- Children should not allow to play with accessories or hang down from the door or any part of the appliance.
- When the appliance is operated in the combination mode, children should only use the appliance under adult supervision due to the temperatures generated.
- Never operate the appliance when it is empty. Food or water should always be in the appliance during operation to absorb the microwave energy.
- Do not operate your appliance if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces. It could result in harmful exposure to excessive microwave energy.
- Do not use the appliance for the purpose of dehumidification. (ex. Operating the microwave oven with wet newspapers, clothes, toys, electric devices, pet or child etc.) It can be the cause of serious damage to safety such as a fire, a burn or a sudden death due to an electric shock.
- Be certain to use proper accessories on each operation mode. Improper use could result in damage to your appliance and accessories, or could make spark and a fire.

CAUTION

CAUTION

- To reduce the risk of injury to persons, malfunction, or damage to the product or property when using the appliance, follow basic safety precautions, including the following:

Installation

- Install the appliance according to the installation requirements that are in this manual.
- According to the installation requirements set, otherwise the impact of heating, prone to danger.
- Install or locate this oven in accordance with the installation instructions provided.
- Allow at least 8 cm from the front of the oven door to avoid accidental tipping of the appliance.
- The turntable must always be in place when you operate the appliance.
- Do not block an exhaust outlet that is located on the top, bottom or side of the appliance.
- Do not place any object (such as kitchen towels, napkins, etc.) between the appliance front face and the door.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Operation

- Do not touch the appliance (including the oven door, outer cabinet, rear cabinet, oven cavity, accessories and dishes) during grill mode, convection mode and auto cook operations. The temperature of accessible surfaces may be high when the appliance is operating. There is the danger of a burn unless wearing thick culinary gloves.

- Do not place an object(a book, a box, water bottle, vase etc.) on the appliance. The appliance may overheat or catch fire or the object may fall, causing injury to persons.
- Do not operate the appliance with the door open. It could result in harmful exposure to excessive microwave energy.
- Set the cooking times correctly. The small amounts of food require shorter cooking or heating time. Over cooking may result in the food catching on fire and subsequent damage to your appliance.
- Do not use recycled paper products. They may contain impurities which may cause sparks or fires when used in cooking.
- Do not cook food wrapped in paper towels or newspaper, unless your cook book contains instructions for the food you are cooking.
- Do not use newspaper in place of paper towels for cooking.
- Do not use the appliance to dry newspapers or clothes. They may catch fire.
- Do not cook eggs in their shell. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they can explode, even after microwave heating has ended. Pressure will build up inside the egg which will burst.
- Do not attempt deep fat frying in your appliance. This could result in a sudden boil over of the hot liquid.
- Pierce the skin of potatoes, apples or any such fruit or vegetables before cooking. They could burst.
- If smoke is observed (or emitted), switch off or unplug the appliance and keep the door closed in order to stifle any flame.
- Follow exact directions given by each manufacturer for their popcorn product.
 - Never use a brown paper bag for popping corn.
 - Never attempt to pop leftover kernels.
 - Do not leave the appliance unattended while the corn is being popped.
 - If corn fails to pop after the suggested times, discontinue cooking.
 - Overcooking could result in the corn catching a fire.

- The power connection may be achieved by having the plug accessible or by incorporating a switch in the fixed wiring in accordance with the wiring rules. Using improper plug or switch can cause an electric shock or a fire.
- All air vents should be kept clear during cooking. If air vents are covered during appliance operation the appliance may overheat.
- When removing dishes from the microwave oven, be careful not to tip over or move the turntable.

Maintenance

- If it is necessary to take precautions during user maintenance, appropriate details shall be given.
- Do not rinse containers, tray and rack by placing them in water immediately after cooking.
- Unplug the power plug and allow it to cool before cleaning.
- Always use gloves when removing food and accessories after cooking as the oven and accessories will be very hot.
- Do not allow food or cleaner residue to accumulate on sealing surfaces of the appliance.
- Keep the inside and outside of the appliance clean.

Cleaning

Keep the oven clean inside and outside. Take special care to keep the inner door panel and the front frame free of food or grease build-up. Clean your oven weekly or more often, if needed.

- Abrasive cleansers, steel wool pads, gritty wash cloths, some paper towels, etc., can damage the control panel and the interior and exterior of the oven.

Cleaning the Interior

- Food spatters or spilled liquids stick to warming drawer walls and between the seal and door surface. It is best to wipe up spill-overs with a damp cloth right away.
- Use a damp cloth to wipe out crumbs that fall between the door and the frame. It is important to keep this area clean to ensure a tight seal.

- Remove greasy spatters with a soapy cloth then rinse and dry.
- Do not use harsh detergent or abrasive cleaners.

Cleaning the Exterior

- Clean the outside of your warming drawer with soap and water, then with clean water and dry with a soft cloth or paper towel. To prevent damage to the operating parts inside the warming drawer, the water should not be allowed to seep into the ventilation openings.
- The door and door seals should be kept clean. Use only warm, soapy water, rinse then dry thoroughly.
- DO NOT USE ABRASIVE MATERIALS, SUCH AS CLEANING POWDERS OR STEEL AND PLASTIC PADS. Metal parts will be easier to maintain if wiped frequently with a damp cloth.

CARING FOR THE ENVIRONMENT

Disposal of Your Old Appliance



 
- This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.
- Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.
- You can take your appliance either to the shop where you purchased the product, or contact your local government waste office for details of your nearest authorised WEEE collection point. For the most up to date information for your country please see www.lg.com/global/recycling.

INSTALLATION

Product Overview

The appearance or components of the appliance may differ from model to model.

Front View

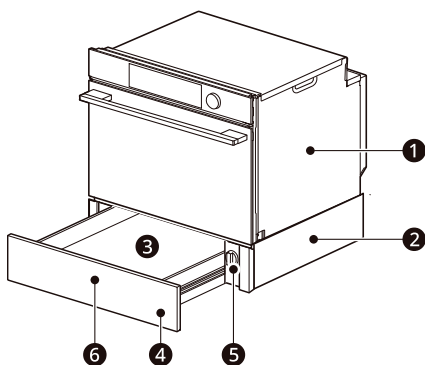

- 1 Oven
- 2 Warming Drawer
- 3 Drawer
- 4 Light Viewer Lens
- 5 Warming Drawer Control Unit
- 6 "Push To Open" label
 - You can remove the "Push To Open" label.

Specifications

Oven Model	DW7D1913M / DW7D1913B / DW7D1913G
Mains connection	230 V~ 50 Hz
Max power consumption	450 W / 2.0 A
Oven installation dimensions (mm)	594 (W) x 139 (H) x 553 (D)
Standby & Sleep Mode Power Consumption	0.5 W

Installation Requirements

Radio Frequency Interference

- When operating the microwave oven, If you use a product such as radio, TV, wireless LAN, Bluetooth, medical equipment, wireless equipment etc.
- Using the same frequency as the microwave oven, the product may receive interference from these products. This interference does not indicate a problem of the microwave or the product and is not a malfunction. Therefore, it is safe to use. However, medical equipment may receive interference as well, so use caution when using medical equipment near the product.

Installing the Appliance

Before Installing the Appliance

Remove all tape and packing materials before using the appliance. Dispose of all plastic bags after unpacking the appliance.
Never allow children to play with packing materials.

WARNING

- The information in this manual should be followed exactly.

⚠ WARNING

- Failure to do so could result in fire or electrical shock, causing property damage, personal injury or death.
- DO NOT put any weight on the oven door. Never allow anyone to climb, sit, stand or hang on the oven door.
 - The oven could be tipped and injury might result from contact with hot food or the oven itself.
- The power must be shut off while the electrical connections are being made.
 - Failure to do so can result in severe personal injury, death or electrical shock.
- Mounting screws must be used.
 - Failure to do so can result in the appliance falling out of the cabinet causing serious injury.

⚠ CAUTION

 
- Make sure the cabinets and wall coverings around the appliance can withstand the temperature (up to 90 °C) generated by the appliance.
 - Discoloration, delamination or melting may occur.
- During installation, ensure that no persons can come into contact with live components.
- The appliance must be installed by a qualified professional electrician, in accordance with the corresponding regulations and standards.
- The oven is a heavy appliance and must be transported with great care.
- Before initial use, remove all packaging materials, from both inside and outside the appliance.
- No modification may be made to the oven's technical characteristics.
- The integrated cooking area or hotplates is/are provided with special connections. These may only be attached to the appropriate corresponding connections of the same type.

NOTE

- This installation must be completed by a qualified installation engineer or technician.
Proper installation is the responsibility of the installation engineer and product failure due to improper installation is NOT covered by warranty.
 - Installation engineer: please retain these instructions for local inspector's reference, then leave them with the consumer.
 - Consumer: please read and keep these instructions for future reference and be sure to read the entire OWNER'S MANUAL prior to use.
 - Do not use the parts except for provided components when you install the product.
 - Make sure the oven is flush with the front of the enclosure.

Parts / Tools

Tools Needed

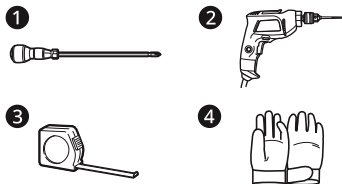

- 1 Phillips Screwdriver
- 2 Drill
- 3 Tape Measure
- 4 Gloves

Parts Included



- 1 Furniture Screw (2 ea)

 
Dimensions and Clearances

The first step of the installation is to measure the current cutout dimensions and compare them to the cutout dimensions shown below. Little or no cabinet work may be necessary.

NOTE

- Make sure the base is level and the front of the cabinet is square.
- A gap must be minimum 10 mm between the rear of the installed oven and the connecting wall.
- Kitchen cabinets in contact with the oven must be heat resistant up to 90 °C, and fronts of nearby units to at least 70 °C.

Installation Drawings (with Oven)

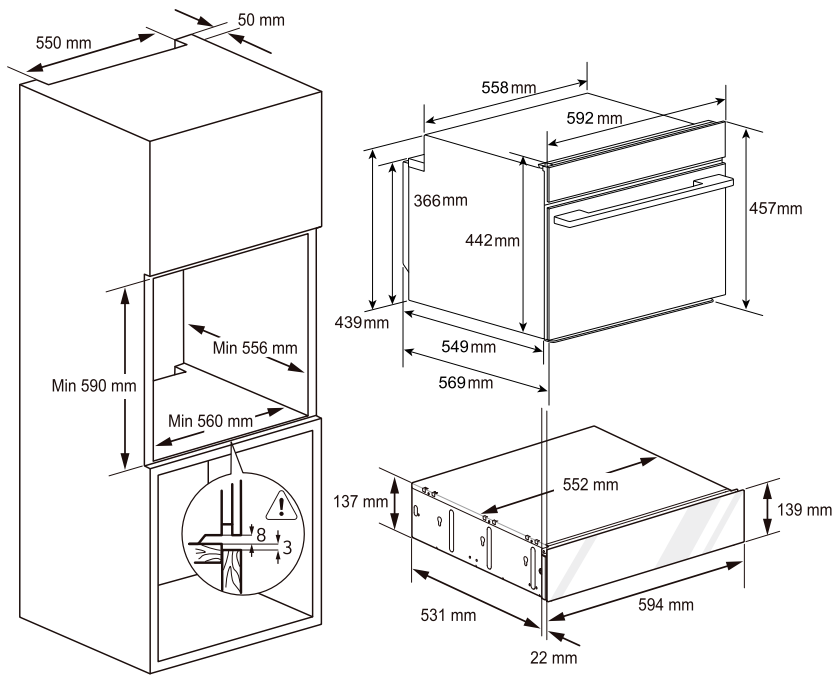


Dimension/Clearance	Built-in Cabinet	Dimension/Clearance	Product
Cutout depth	≥556 mm	Oven depth	549 mm
Cutout width	≥560 mm	Oven width	558 mm
Cutout height	≥590 mm	Oven height	442 mm
Ventilation cutout depth	≥50 mm	Drawer depth	553 mm

16 INSTALLATION


Dimension/Clearance	Built-in Cabinet	Dimension/Clearance	Product
Ventilation cutout width	≥550 mm	Drawer width	594 mm
-	-	Drawer height	139 mm

 Remove the back wall of the installation cabinet. If it is difficult to remove the back wall, make a hole at least 100 mm in diameter that the drawer power cord can protrude on the back wall.

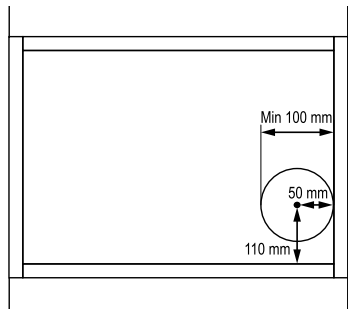

For correct ventilation, a ventilation opening of 50 mm is required between the back wall and the floor of the installation cabinet.

 Installation Drawings (without Oven)

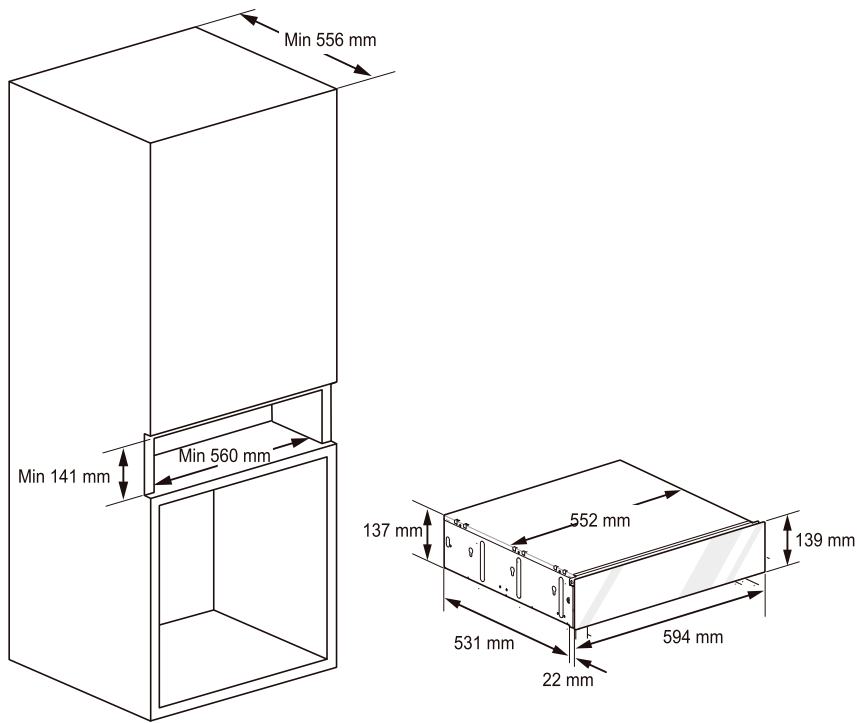

Dimension/Clearance	Built-in Cabinet	Dimension/Clearance	Product
Cutout depth	≥556 mm	Oven depth	553 mm
Cutout width	≥560 mm	Oven width	594 mm
Cutout height	≥141 mm	Oven height	139 mm

Remove the back wall of the installation cabinet. If it is difficult to remove the back wall, make a hole at least 100 mm in diameter.

For correct ventilation, a ventilation opening of 50 mm is required between the back wall and the floor of the installation cabinet.

Installing the Appliance

Clean the cabinet before installing the product as it may be dusty. Dust inside the cabinet may seep into the product and cause a breakdown.

At least two people must work together.

Installation with oven

 
- 1 Install the drawer in the cabinet.
- 2 Place the oven on the drawer.

18 INSTALLATION

- 3 Open the product's door and tighten the screws on the two holes on the left and right sides of the trim bracket ❶.

Installation without oven


- 1 Install the drawer in the cabinet.
- 2 Open the product's door and tighten the screws on the two holes on the left and right sides of the trim bracket ❶.

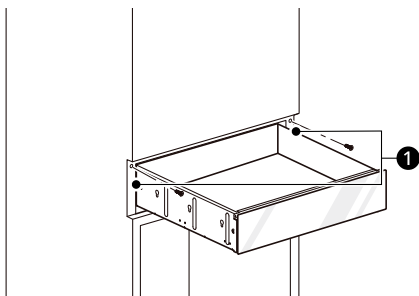

OPERATION

Control Panel

 Control Panel Features

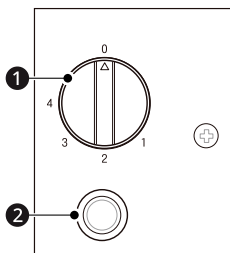

① Operation Control Knob

Use it when warming food and warming the ovenware/plate to a good temperature.

② Operation Indicator

Turning the operation control knob in the direction of the arrow will light up to check the operation status. After closing the warming drawer, you can check if the operation indicator is off by the light source lens.

Using the Oven

Before Using the Warming Drawer

 
The Warming Drawer keeps hot cooked foods at serving temperature.

⚠ WARNING

- All food placed in the Warming Drawer should be covered with an oven-safe lid or aluminum foil to maintain quality.
- Do not place foil on bottom or sides of drawer.
- Use only utensils and cookware recommended for oven use in the Warming Drawer.

Using the Warming Drawer

- 1 Push the drawer to open.
- 2 Place the food or ovenware/plate in the drawer.
- 3 Turn the knob to the desired setting.

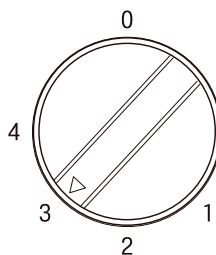

- 4 Push the drawer to close.

Preheating

As far as possible, distribute the ovenware over the entire surface.

NOTE

- The length of time required for preheating depends on the material the ovenware is made of and its thickness, as well as the quantity, height and arrangement of the ovenware.
- It takes approximately 15-25 minutes to preheat ovenware for 6 people.

Warming Drawer food/power level recommendations

Different types of food may be placed in the warming drawer at the same time.

The table shows various uses for the warming drawer. Set the function selector to the desired setting. Preheat the ovenware as indicated in the table.

Setting	Food / Ovenware (Keeping warm)
1	• Proving yeast dough to rise • Cup / Plates warming
2	• Defrost deep frozen food • Keeping eggs warm • Keeping breads warm
3	• Roasting food • Mashed potato • Baked potatoes
4	• Dry cakes • Keeping food warm • Keeping drinks warm • Flat dough based foods • Melting cooking chocolate • Preheating ovenware

- The amount of food to be warmed is best for 4 to 6 people.
- For best results, do not leave food in the warming drawer for more than one hour.

⚠ CAUTION

- Do not leave smaller quantities or heat-sensitive food, such as eggs, in the warming drawer more than 30 minutes.
- Use the utensils when you warm the food.
- When heating, cover or wrap to prevent the surface from drying out. (When you frying French fries, don't use wrap or cover.)
- Please notice that the container may become hot after heating.
- Always use the plate when using a warm drawer.
- After operating the warming drawer, turn the operation control knob to the OFF State. (0 position)
- The knob is hot during operation. When the warming drawer is in operation, wear gloves and operate the knob.

NOTE

- Insulation is a function to maintain food temperature.

TROUBLESHOOTING

Before Calling for Service

If following symptoms appear while using the appliance, check it one more time. It may not be a failure.

Operation

Symptoms	Possible Cause & Solution
The warm drawer does not work.	Is the warm drawer connection connected? Check the power cord connection.
	Is the operation control knob in the position that you want to operate? Set the operation control knob to the desired position.
The warm drawer does not open or close smoothly.	Is there a lot of food or tableware in the warming drawer that causes the device to tilt to one side? Reduce the weight inside the warming drawer and do not put food or utensils tilted to one side.
Water drops form inside the warming drawer.	Is there water on the wall of the warming drawer? If there is any water on the bottom of the warming drawer, please remove it.
	Did it work without wrap, lid or aluminum foil? Cover the food with plastic wrap, lid or aluminum foil. (except when frying)
The food becomes dry.	Did it work without wrap or vinyl? Cover the food with plastic wrap, lid or aluminum foil. (except frying crispy food)
After the operation is completed, the operation indicator lights up and the warming drawer operates.	Is the operation control knob in the OFF position? When not in use, set the operation control knob to the power OFF state (O position).

LG Service Centre

If the fault cannot be rectified by the above measures, contact the LG service centre.

NOTE

- If faulty, the appliance must not be used. If a fault occurs, the appliance must be isolated by removing the mains plug or switched off by removing the fuse or turning off the circuit breaker in the house fuse box.

The appliance must only be repaired by a specially trained and qualified electrical professional. Repairs carried out improperly may result in considerable damage.

CAUTION

- Repairs to the appliance must be carried out by a specially licensed technician only. Considerable danger may result from incorrect repairs.
 - Do not use the appliance if damaged. In the event of a fault or failure, switch off at the mains. In the event of a fault, visits by technicians from Customer Service or dealers may not be covered by the warranty if the cause of failure is the result of abnormal customer use.
-

Memo

